



✧ Trigger Mode Selection

① ENTER Program Mode



④

Scan the bar code below to program Trigger Mode selection, then choose the trigger option you want.

② Trigger Mode Selection



②

③ Auto-Trigger



③

③ Manual Trigger *



36in

③ Manual Trigger - Switched Power



Note: The ST3400-18 is available with manual trigger only.

④ EXIT Program Mode



④

TRIGGER/REREAD DELAY

Additional Programming 3-83